

What to do if...
What to do if...

	A tire punctures	P. 352	If you have a flat tire
	The engine does not start	P. 360	If the engine will not start
		P. 54	Engine immobilizer system
		P. 363	If the battery is discharged
	The shift lever cannot be moved out	P. 361	If the shift lever cannot be shifted from P
	The engine coolant temperature gauge enters the red zone	P. 369	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 362	If you lose your keys
	The battery runs out	P. 366	If the battery is discharged
	The doors cannot be locked	P. 19	Doors
	The horn begins to sound	P. 56	Alarm
	The vehicle is stuck in mud or sand	P. 371	If the vehicle becomes stuck



The warning light or indicator light comes on

P. 333 If the warning light turns on



nWarning lights



Brake system warning light

or



P. 333



Malfunction indicator lamp

or



P. 334



"ABS" warning light

or



P. 334



Driver's seat belt reminder light

P. 335



Front passenger's seat belt reminder light

P. 335



Low fuel level warning light

P. 335



Master warning light

P. 335



SRS warning light

P. 334



Electric power steering warning light

P. 334



Open door warning light

P. 335



Pre-collision safety system warning light

P. 334



Charging system warning light

P. 334



Low tire pressure warning light

P. 335



The warning message is displayed

P. 338 If the warning message is displayed